



STARTER-ENGINE STOP-HEADLIGHT CONTROL SWITCH ARRANGEMENT

	ST1	ST2	KB	KW	IG	Po	HL	DY	SI
FREE			OFF		OFF				
ON	○	○	RUN	○	Po	○	○	○	○
	Bk	Y/R	OFF		HL	○	○	○	○
						Bk/B1	Bk/W	Bk	Br/B
								Bk/R	Bk/R
								Y	Y

HEADLIGHT DIMMER-HORN-PASSING-TURN SIGNAL SWITCH ARRANGEMENT

	DM	LB	HB	HO1	HO2	PA	T	LT	RT	B
L	○	○					LT	○	○	○
(N)	○	○	PUSH	○			(N)	○	○	○
H	○	○	SLIDE	○			Rt	○	○	○
	Bk/Y	W	B	W/G	LG	B	Gr	O	LB	Br/G

IGNITION SWITCH ARRANGEMENT

	BAT	IG	T1	T2	P
OFF					
ON	○	○			
PA					
	R	Bk	Br/W	Br/W	Br

Honda Goldwing GL 1000 – Schaltplan British and European Modell